




HU[®]
Hanshang Hydraulic

NG10 Pilot Uyarılı Hidrolik Valf


1995-2020




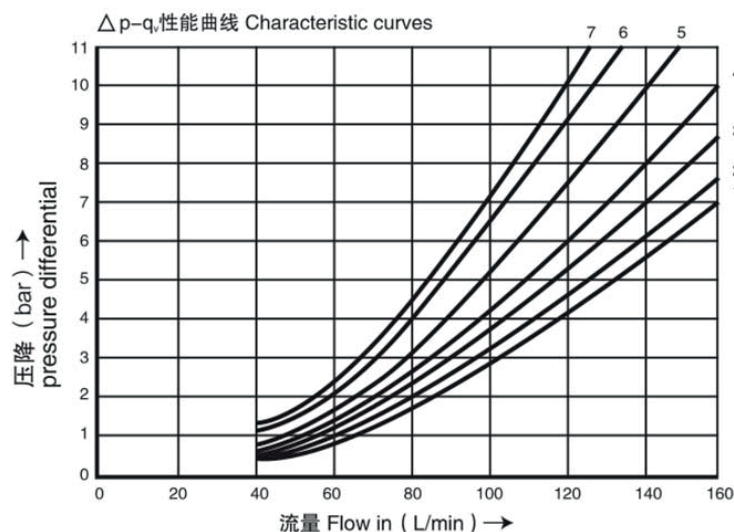


机能符号 Spool symbol	切换位置 Spool position				机能符号 Spool symbol	中位 Central position		
	P-A	P-B	A-T	B-T		A-T	B-T	P-T
E,Y,D	2	2	4	5				
F	1	4	1	4	F	3	-	6
G,T	4	2	2	6	G,T	-	-	7
H,C	4	4	1	4	H	1	3	5
J,K	1	2	1	3				
L	2	3	1	4	L	3	-	-
M	4	4	3	4				
P	4	1	3	4	P	-	7	5
Q,V,W,Z	2	2	3	5				
R	2	2	3	-				
U	3	3	3	4	U	-	4	-

- (1) Internal pilot and external pilot: The "P" port with M6 screw 3 is external pilot, to convert valve into internal pilot, the M6 screw 3 must be removed.
- (2) Internal drain and external drain: Removing the bolt 1, to install M6 screw 2 is external drain, unscrew the M6 screw 2 is internal drain

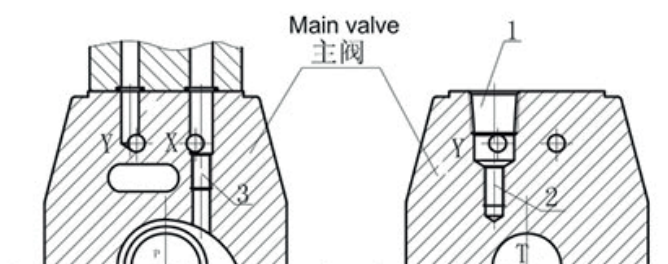

DWHG10 explanation partial drawing

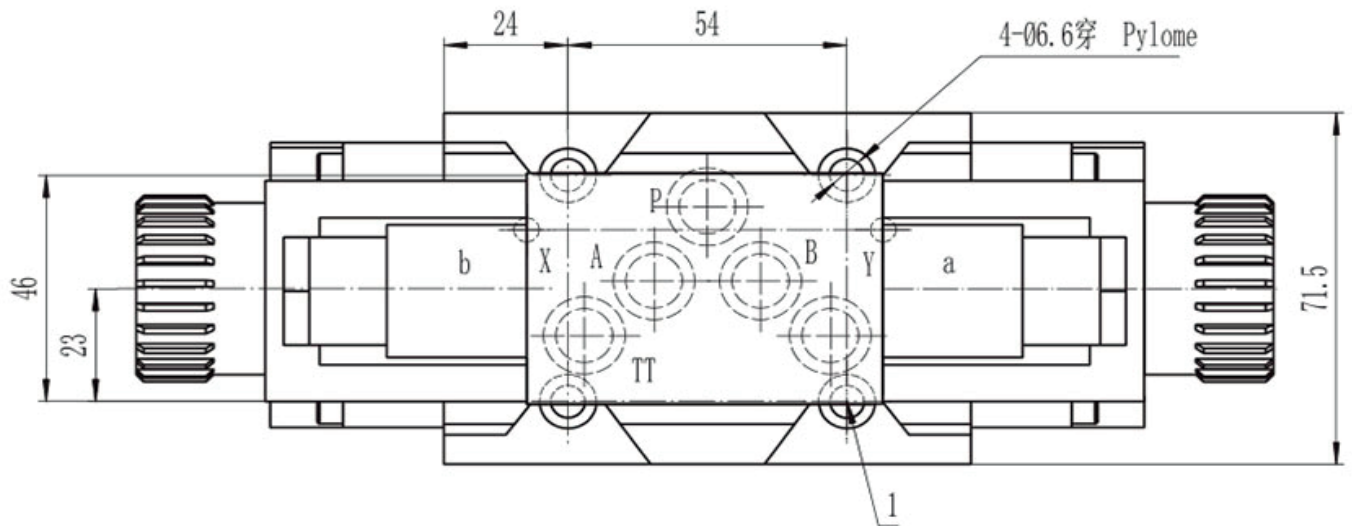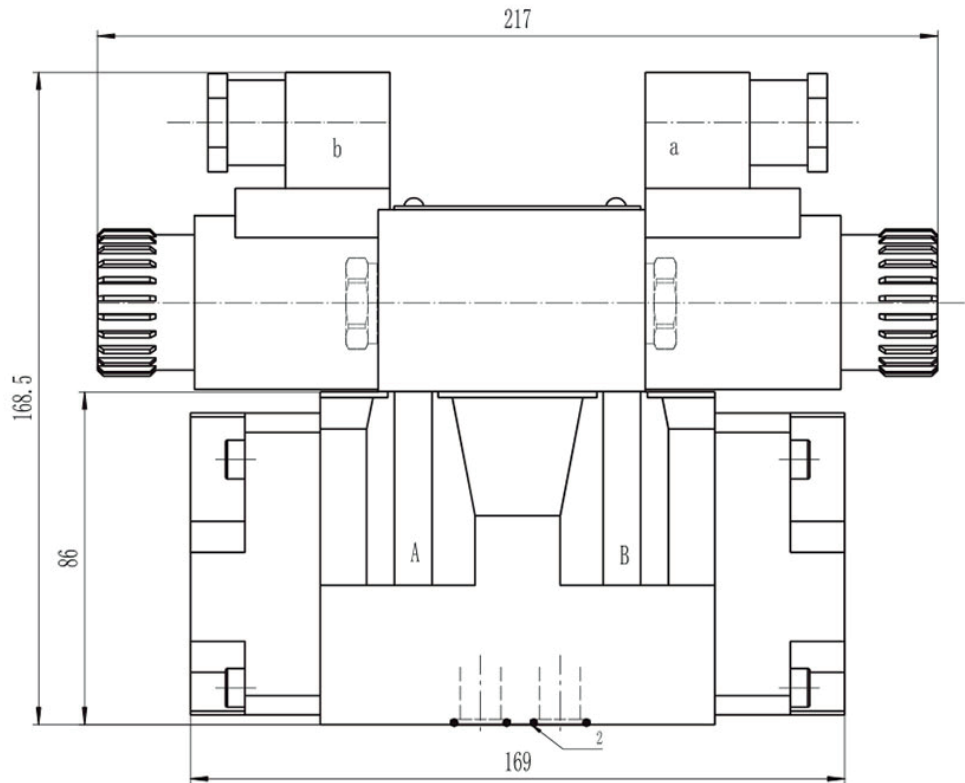

- 1.Valve' s set screw
4 of M6 x 45 GB/T70.1-12.9
Tightening torque Ma=15.5Nm.
2.O-ring $\phi 16 \times 1.9$