




HU[®]
Hanshang Hydraulic

NG16 Pilot Uyarılı Hidrolik Valf

1995-2020



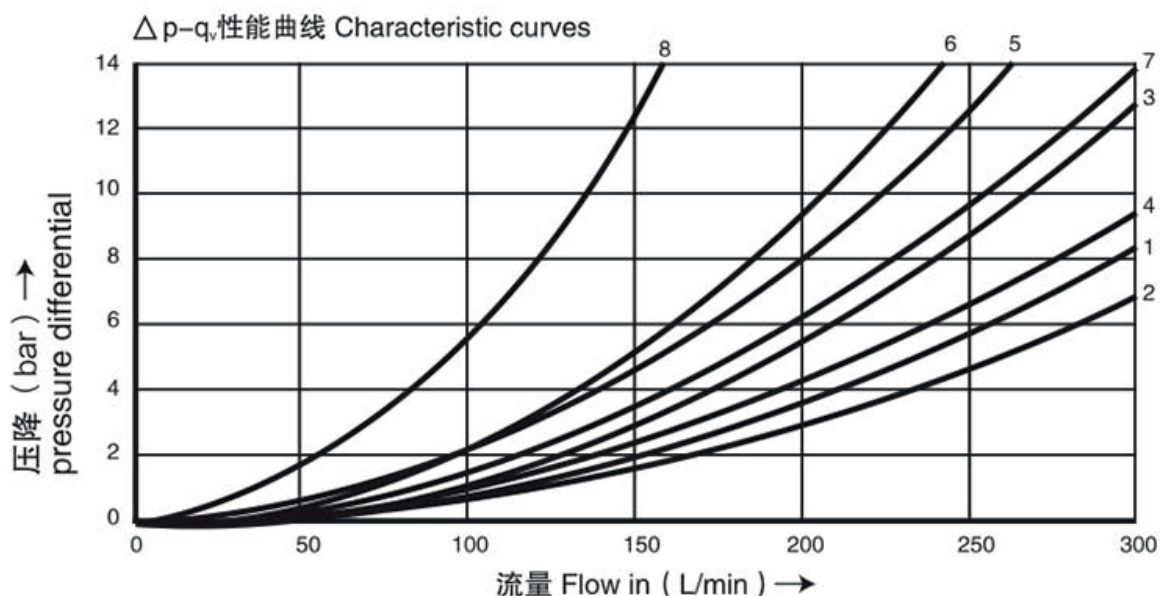


机能符号 Spool symbol	切换位置 Spool position				
	P-A	P-B	A-T	B-T	P-T
E,D,Y	1	1	1	3	-
F	2	2	3	3	-
G,T	5	1	3	7	6
H,C,Q,V,Z	2	2	3	3	-
J,K,L	1	1	3	3	-


机能符号 Spool symbol	切换位置 Spool position				
	P-A	P-B	A-T	B-T	P-T
M,W	2	2	4	3	-
R	2	2	4	-	-
U	1	1	4	7	-
S	4	4	4	-	8

(1) Internal pilot and external pilot: Removing the sideward cover, installing the pin to allow "P" port with open position is internal pilot, to convert the pin into "P" port with plugged position is external drain.

(2) Internal drain and external drain: Removing the bolt 1 and installing M6 screw 2 is external drain, unscrew the M6 screw 2 is internal drain.

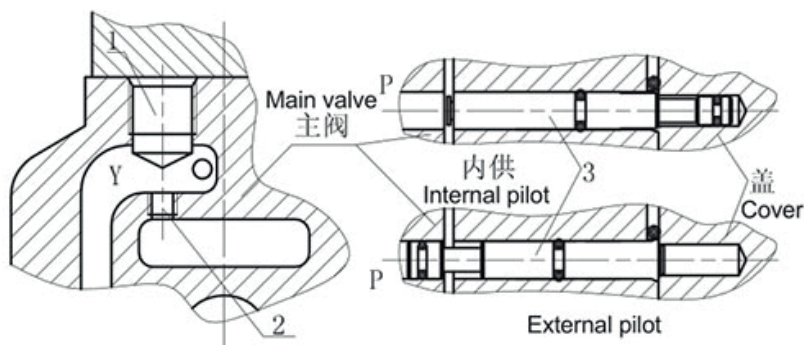

DWHG16 explanation partial drawing

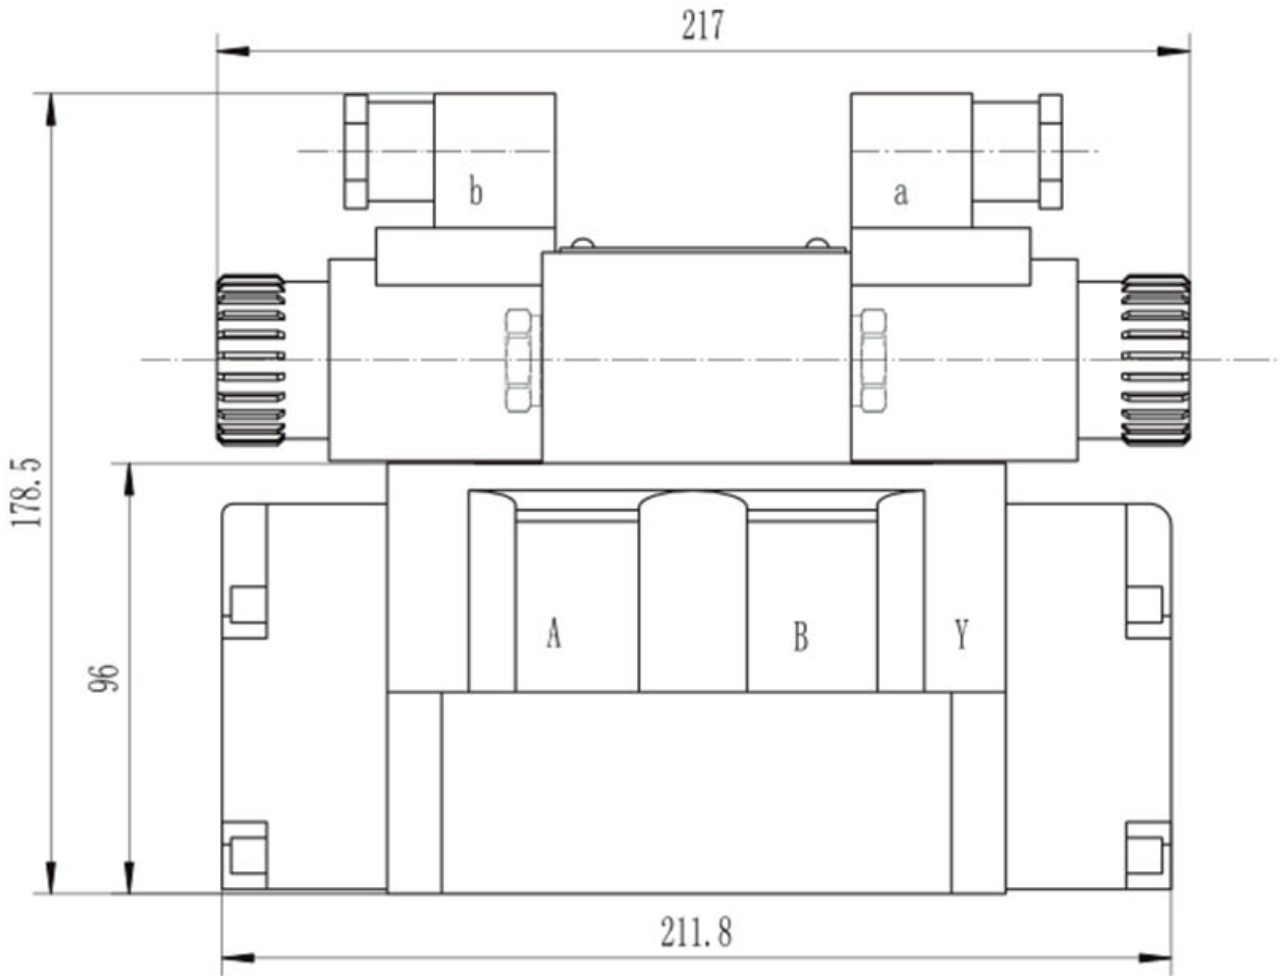

4 of M10×60 GB/T70.1-12.9
Tightening torque Ma=75Nm.
2 of M6×60 GB/T70.1-12.9 Tight-
ening torque Ma=15.5Nm.
O-ring for P.T.A.B Port: $\phi 26 \times 2.4$
O-ring for X.Y.L Port: $\phi 15 \times 1.9$

