




HU[®]
Hanshang Hydraulic

NG25 Pilot Uyarılı Hidrolik Valf

1995-2020



4DWHG25

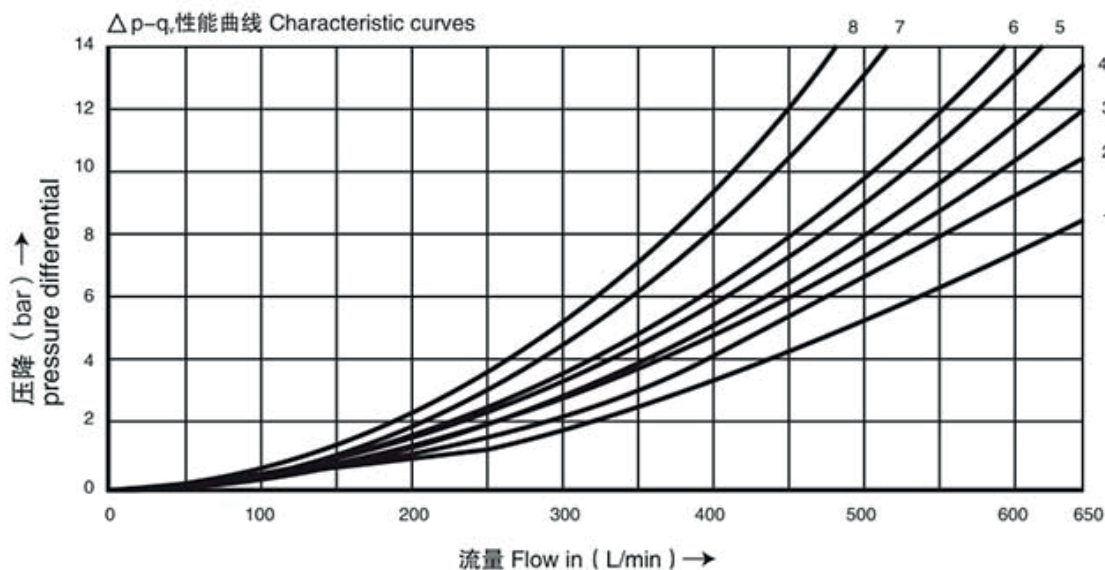

7 机能符号 G Spool symbol G
中位 P - T Central position P - T

8 机能符号 T Spool symbol T
中位 P - T Central position P - T

机能符号 Spool symbol	切换位置 Spool position			
	P-A	P-B	A-T	B-T
E	1	1	1	3
F	1	4	3	3
G	3	1	2	4
H	4	4	3	4
J,Q	2	2	3	5

机能符号 Spool symbol	切换位置 Spool position			
	P-A	P-B	A-T	B-T
L	2	2	3	3
M	4	4	1	4
P	4	1	1	5
R	2	1	1	-

机能符号 Spool symbol	切换位置 Spool position			
	P-A	P-B	A-T	B-T
U	4	1	1	6
V	2	4	3	6
W	1	1	1	3
T	3	1	2	4

(1) Internal pilot and external pilot: Removing the sideward cover, installing M6 screw 1 is external pilot, unscrew the M6 screw 2 is internal pilot.

(2) Internal drain and external drain: Removing the M6 screw 2 in the "T" port on the top of main valve is internal drain, installing the M6 screw 2 is external drain

