 




C50


INTERMEDIO DIRITTO CALZAM. INTERMEDIATE STRAIGHT PUSH ON

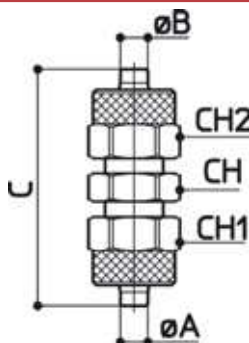

CODICE	A	B	C	CH	CH1	CH2	GR
C50005	5/3	5/3	28.5	8	8	8	8
C50006	6/4	6/4	34.5	12	12	12	22
C50608	6/4	8/6	35	14	14	12	26
C50008	8/6	8/6	35	14	14	14	29
C50010	10/8	10/8	38	14	16	16	37
C50012	12/10	12/10	42	17	19	19	51
C50015	15/12.5	15/12.5	45.5	22	22	22	77

C60

 
INTERMEDIO-L CALZAM. INTERMEDIATE ELBOW PUSH ON

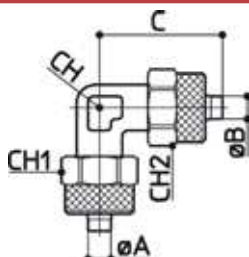

CODICE	A	B	C	CH	CH1	CH2	GR
C60005	5/3	5/3	18	9	9	9	12
C60006	6/4	6/4	21.5	8	12	12	21
C60608	6/4	8/6	22.5	10	14	12	28
C60008	8/6	8/6	22.5	10	14	14	28
C60010	10/8	10/8	25.5	11	16	16	38
C60012	12/10	12/10	29	13	19	19	61
C60015	15/12.5	15/12.5	34	17	22	22	88

C70

 
INTERMEDIO-T CALZAM. INTERMEDIATE TEE PUSH ON

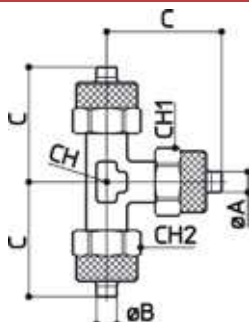

CODICE	A	B	C	CH	CH1	CH2	GR
C70005	5/3	5/3	21.5	8	8	8	17
C70006	6/4	6/4	22.5	8	12	12	32
C70608	6/4	8/6	22.5	10	14	12	39
C70008	8/6	8/6	22.5	10	14	14	42
C70010	10/8	10/8	25.5	11	16	16	57
C70012	12/10	12/10	29	13	19	19	82
C70015	15/12.5	15/12.5	34	17	22	22	123

C26

 INTERMEDIO-X CALZAM. INTERMEDIATE CROSS PUSH ON

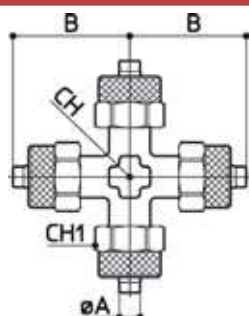

CODICE	A	B	CH	CH1	GR
C26005	5/3	21.5	8	8	22
C26006	6/4	22.5	8	12	46
C26008	8/6	22.5	10	14	53
C26010	10/8	25.5	11	16	88